To discharge water

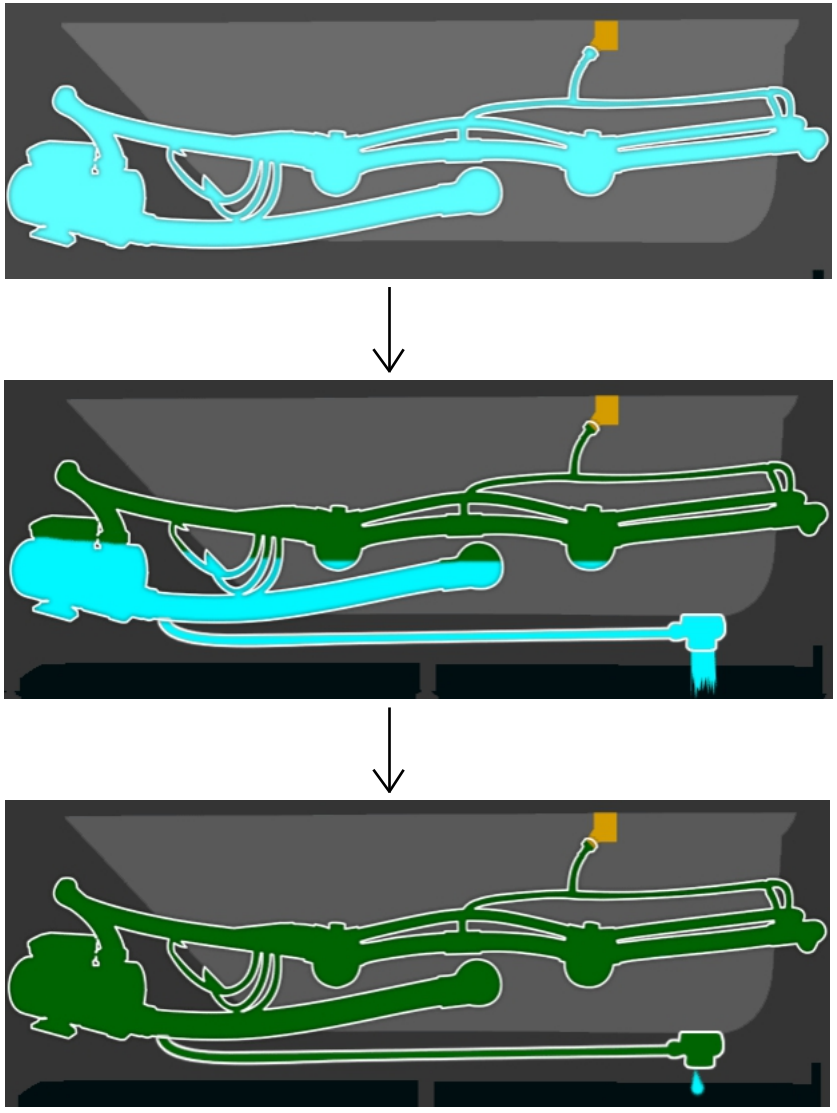

CP12E

1900X1350X820mm

（4）installation

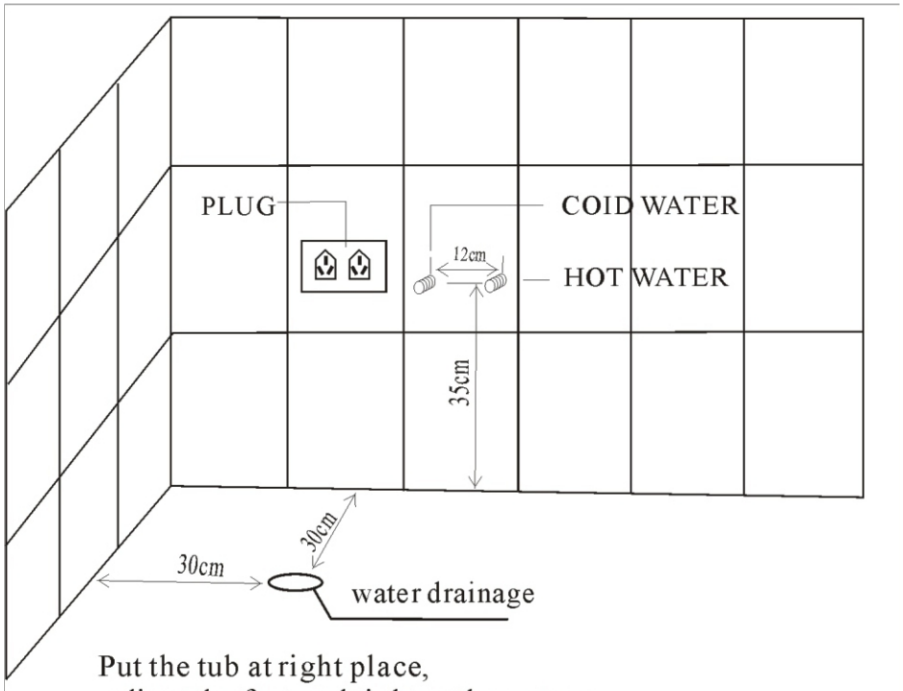

Put the tub at right place,
adjust the feet and tighten the screws.

please check the drawing of cleaning function below.

INLET

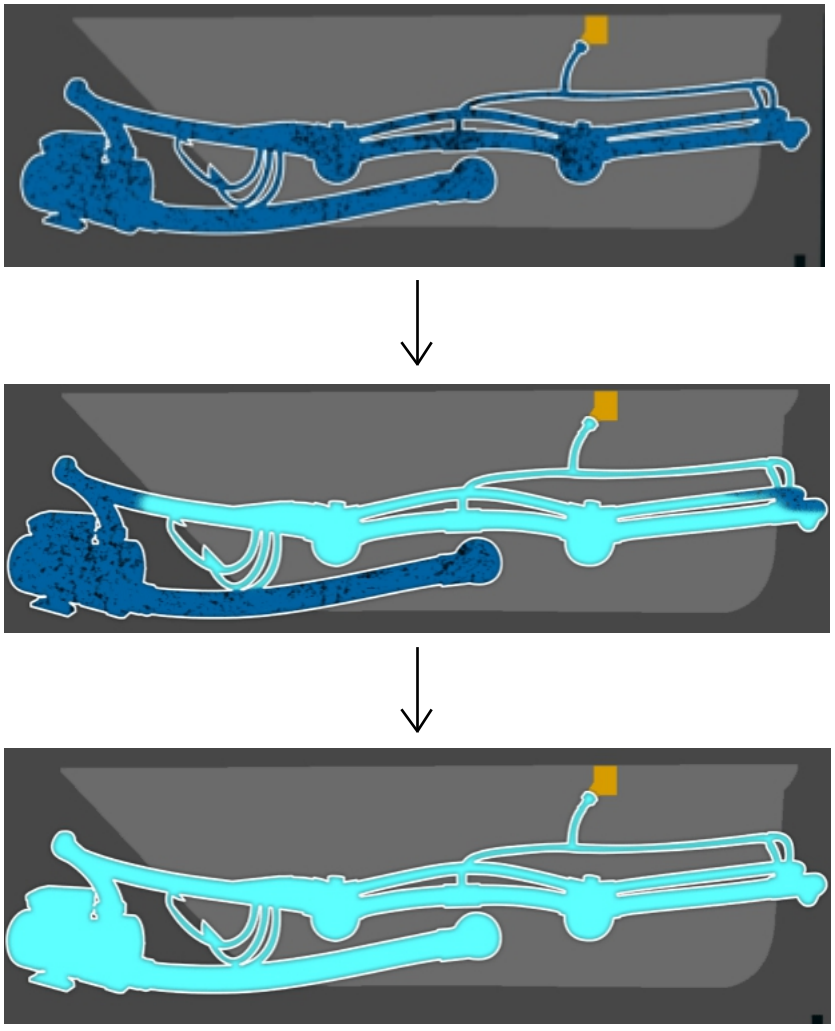

6.Solutions of basic problems

1. . Q: why do not thermostat heating run?
A: Check whether you adjust the temperature of control panel to the water temperature or higher at room temperature.

3. Q: Press lights, ozone, speakers, fan, air-conditioning and other functions, but why don't they start to run?

A: check whether the plug-in terminals contacts with each other well ; if lights and ozone sterilization still fails to run, please turn on the fuse and ensure if it has blew out then you can contact with my company staff.

4. Q: If speaker is voiceless, why is that?

A: Please open the FM radio, check whether the volume button on the panel has been Increased . If not,you can contact with my company staff. Reference to the following reasons: Speaker's terminal contacts badly;Internal chips had burned out;the corresponding relay is open; the Speaker is broken .

5. Q: If there is too little FM radio programs received or in noisy , why is that?

A: Please check the location of the antenna, release antenna or to remove it to another appropriate location.

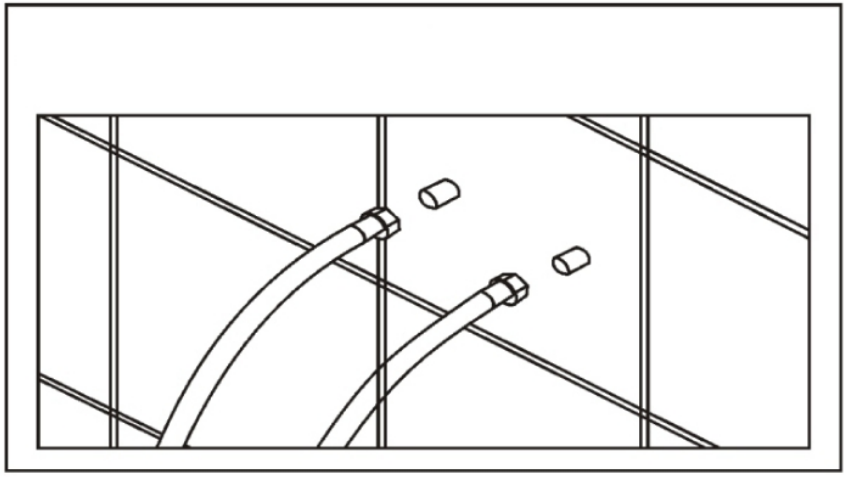

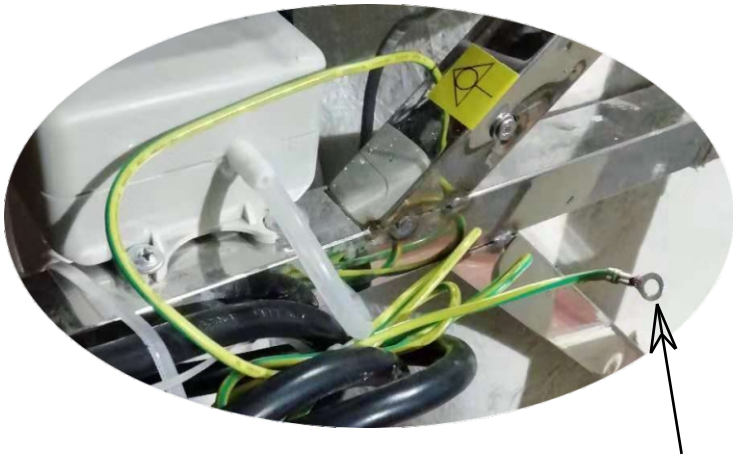

This place must be grounded.

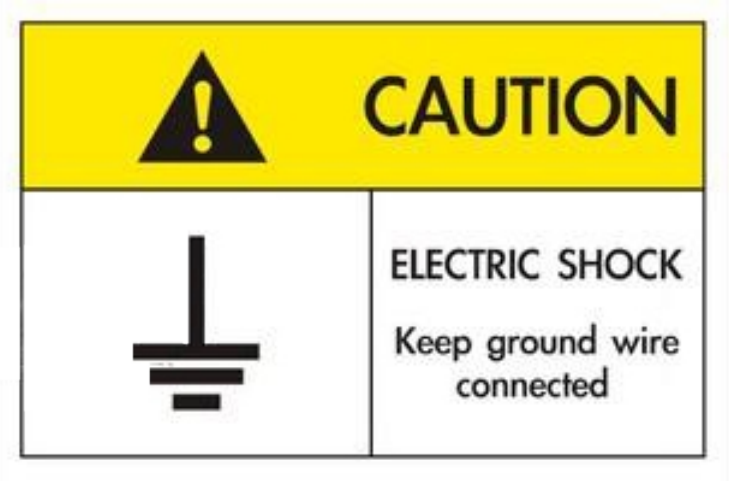

4.Run environment

1)POWER:AC220V

2)Bottom light:AC12V

3)Water 、 Wind pump AC220V

4)Heater:AC220V

5)O3:AC12V

6)Air adjust:AC220V

5.Notes of user

1.Please read the instruction carefully when install the product,so that you can do it effectively in time.

2. User should pay attention to the high-voltage on products marked signs, Not to touch their locations, ensure Personal safety;

3. Don't expose the controller to the moist or high temperature environment to prevent Þre or electric shock. Please towel the controller after using it.

4. Please keep water clean, no solid debris left .Otherwise , it will jam the backwater and the pipeline, resulting in damaging the equipment or Þttings. If jam happened, please turn off the power to clean stems immediately, then restart it.

5. Please do not pull any of the output lines, not beat or throw the equipment at random , Otherwise crusts or inner parts will be broken.

6. Don't open the cover of the controller for there are dangerous parts in allowed for maintenance it .Only qualiÞed servicemen are allowed for maintenance.

7. The used power supply must be in line with the speciÞed voltage value shown on the controller , otherwise it is not allowed to be used even burns out the controller burns out the controller.

8. The intervals of continuous power on and off must be over 30s for extending the use life of the controller.

9. Please do not plug or pull the control panel with electricity, otherwise the devices will be damaged or unusual conditions will appear.At the moment ,turn off the power in seconds, restart it.

10. Please insert Þttings(such as:light, speaker,valve,ozone sterilization, water pump, wind pump, steam generator ,etc.) Into corresponding output ports of equipment correctly, otherwise they will be damaged in order to cause danger.

3.Operation instruction and direction

1) Power ON/OFF switch
Push down the switch,the controller is open,its status light is on,and other function can be used only when power is ON.

2) Bottom light ON/OFF button
Push down the button,the light is on;repeat the operation,the light is off.

3) water pump ON/OFF button
Push down the button,the water pump is on;repeat the operation,the water pump is off.

4) wind pump on/off button
Push down the button,the wind pump is on;repeat the operation,the wind pump is off.

5) O3 Ozone sterilization button
Push down the button,Ozone sterilization is on;Repeat the operation ,03 will be stopped in 15 minutes when 03 is switch .

5) Thermostatic heating
when the water pump is open,you can push down the button , Then the Heater starts to run normally. when it is pressed on long time,you can press + to set the water temperature .The temperature setting range is:30 to 50 ℃. Temperature display window will flash when the temperature is set, And will display current water temperature in few seconds.

6) FM CD FM Radio ON/OFF
VOL + — Volume adjusting minus and Volume adjusting plus button.

TUN + — They can turn the radio step by step when they are pressed on short time.They can search the station when they are pressed on long time, it can select memory channel .

Notice: Do not open the water pump When there is not enough water.

open the cap,twist the screw,we can take down 8 pcs of wooden skirts for installation and maintenance.

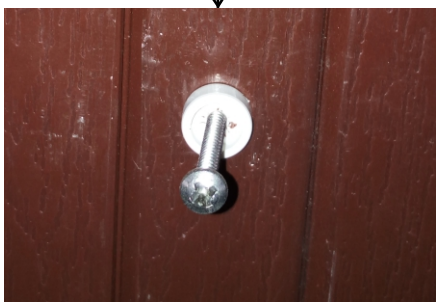

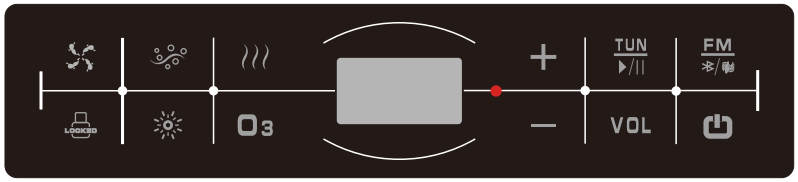

Read the instruction carefully when install the product, please.

1.Schematic diagram of the installation

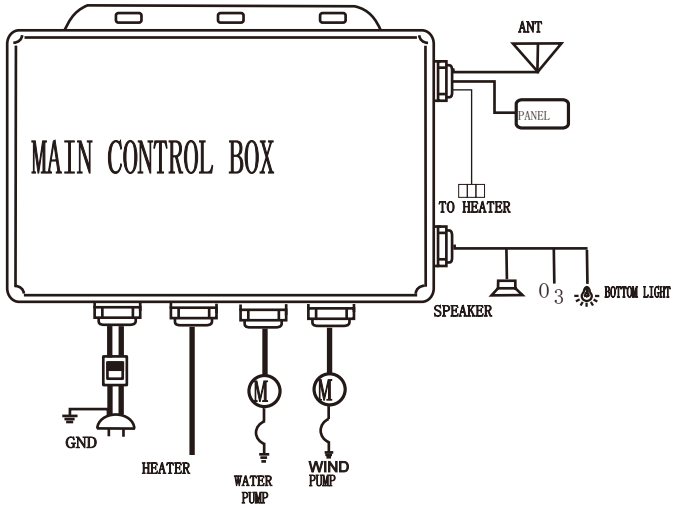

2.Schematic diagram of the panel

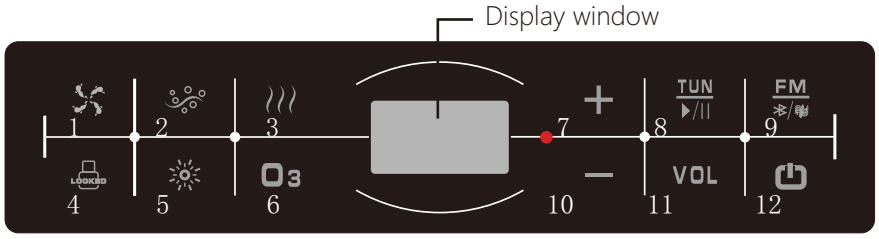

1.water pump
2.wind pump
3.thermostatic heating
4.lock
5.bottom light
6.ozone sterilization
7.adjusting plus
8.Frequency button
9.FM radio button
10 . adjusting minus.
11.Volume button
12.Power ON/OFF button